


H400-H600

Drive Roller Replacement

Always Remove Power From Printer
Before You Do Any Maintenance

Remove Phillips Screw

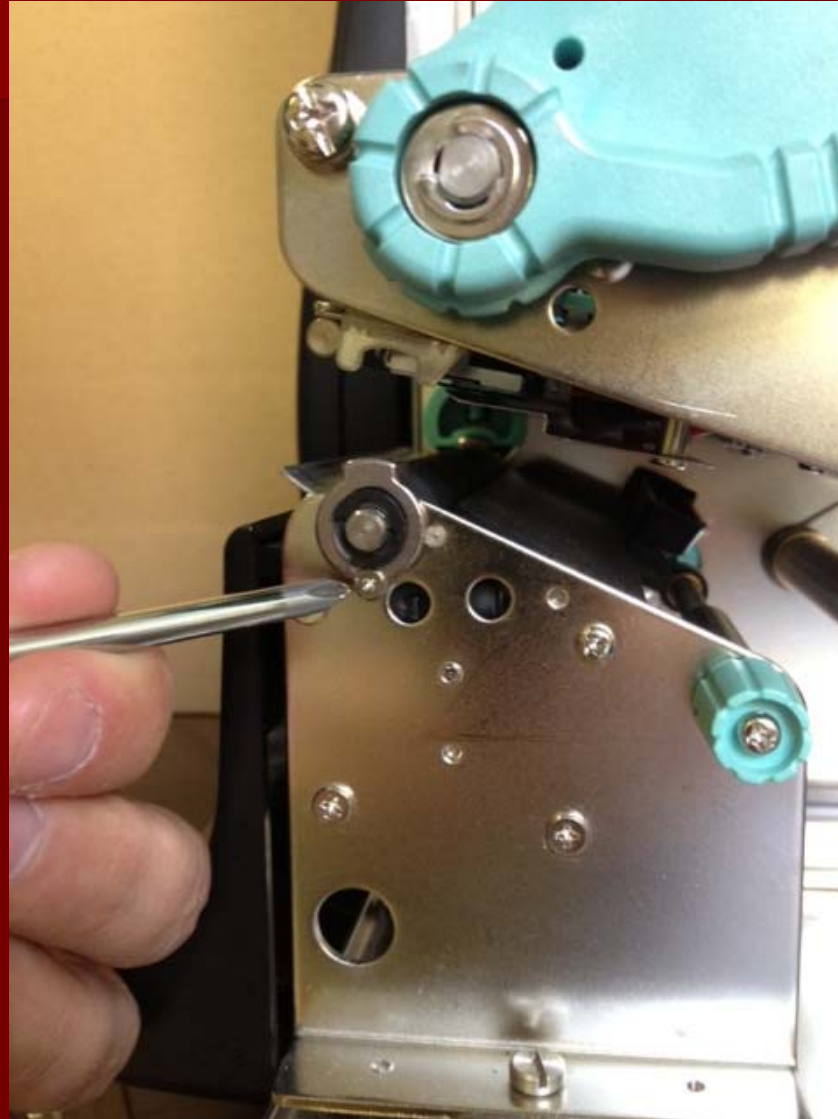



Remove Printhead



Remove Drive Roller Hold Down





Remove Drive Roller



Reverse Steps to Install New Drive Roller

Visit easylabel.com for more information